


Customizing Blocks in 2D DESIGNER V2008

There are instances where two clients require different variations of a symbol on their drawings. This is easily handled by 2D DESIGNER V2008's Standard Manager.

1. Create a unique Standard for the client requiring customized blocks using the Standard Manager.
2. Move to the application whose blocks need to be customized. On the General Parameters page you will see a Block Folder location. This is blank by default, meaning that the software is using the installed folder location.

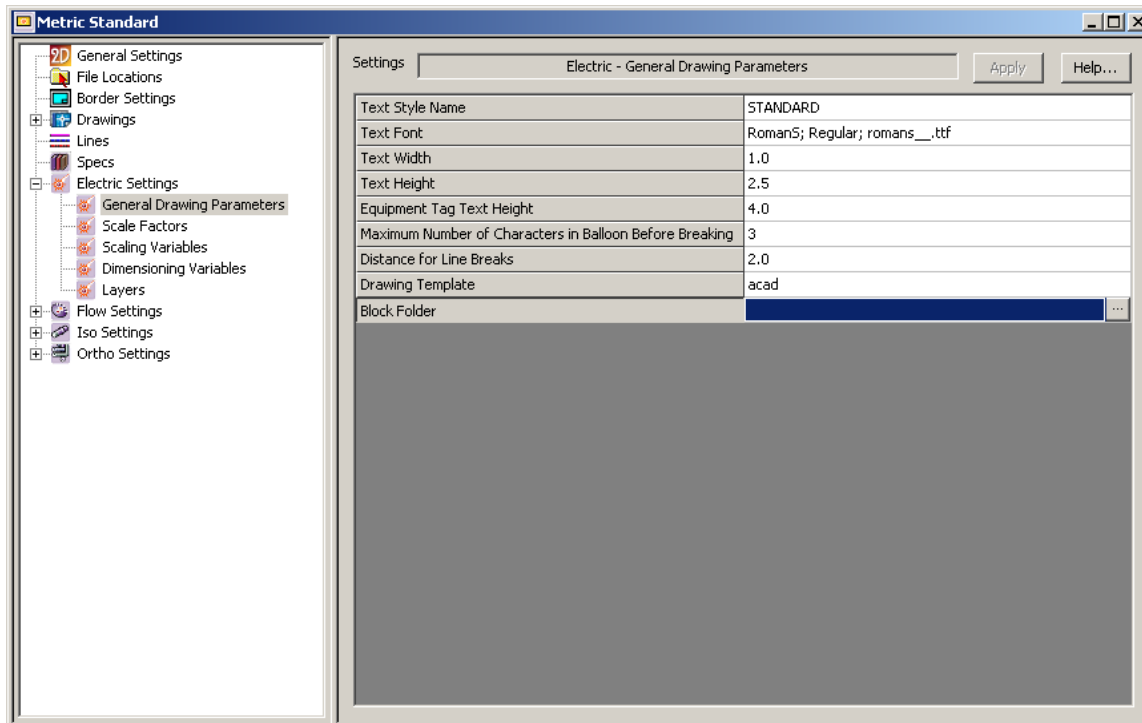

3. Make a copy of the Block folder for the application that requires the customized blocks. By default, this is c:\program files\PROCAD\2D DESIGNER V2008\Designer\AppName\Blocks. For network applications, the location of the applications may be found by using the Setup Maintenance Application.
4. Use the ... button in the Standards Manager and browse to the copied block folder created in Step 3.
5. Modify the block files using AutoCAD.

To determine the name of the block file to customize, you may need to place the component in 2D DESIGNER V2008 using the default blocks, and then use AutoCAD to identify the name of the block file.